


REMANIING CAPACITY

Press the button for 1 second.
Provides you with information about the remaining capacity of your battery.

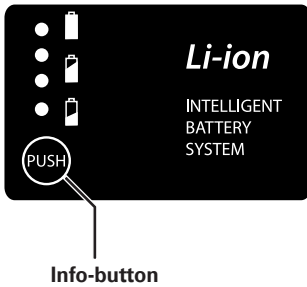

LED Indicator	Remaining Capacity
● ● ● ●	100 - 75%
● ● ● ○	75 - 50%
● ● ○ ○	50 - 25%
● ○ ○ ○	25 - 10%
⊙ ○ ○ ○	10 - 0%
⊙ ⊙ ⊙ ⊙	Overtemperature

○ no light ● light ⊙ blinking

ABSOLUTE CAPACITY

Press and hold the button for 6 seconds.
Gives information about the total absolute capacity of your battery. It can also be seen as a indicator of battery life. Please also refer to the section "Long term storage" and "Battery Charging - General Information".

LED Indicator	Absolute Capacity
● ● ● ⊙	100 - 80%
● ● ⊙ ○	79 - 70%
● ⊙ ○ ○	69 - 60%
⊙ ○ ○ ○	59 - 0%

○ no light ● light ⊙ blinking

CHARGE COUNT

Press and hold the button for 10 seconds.
Provides information about how many times your battery has been charged.

LED Indicator	Charge Count
● ● ● ●	0 - 99
● ● ● ○	100 - 189
● ● ○ ○	190 - 269
● ○ ○ ○	270 - 349
⊙ ○ ○ ○	350-

○ no light ● light ⊙ blinking