

SA SUNTOUR

BATTERY CHARGER INSTRUCTION MANUAL

2015-05-05

Battery Charger; EBBC14-PH3602A

MANUAL BRIEF

This Manual is an additional exposition for correct use of the charger and attentions. All safety and operating instructions should be read before the equipment is installed or operated. If nothing from the following mentioned instructions would help with your problem, please contact the distributor or SR SUNTOUR. Please keep this manual for future reference. Please hand over this manual which the ownership is transferred.



WARNING

- 1. This charger is designed as a Lithium-ion Battery Charger especially for SR SUNTOUR. Do NOT apply this charger for any other electrical systems.
- 2. The charger can be used with the input voltage range between 100-240 VAC.
- 3. Please use the power form domestic AC outlet.
- 4. Always disconnect unit from the AC power outlet when the charger is not in use.
- 5. Keep away this charger from infants, children or pets.
- 6. Keep your hands dry when operating the plug and socket.
- 7. Do not operate this product outdoor, near water or in areas with wet floors, in high humidity atmosphere where condensation forms on the equipment.
- 8. Do not dash this product with hard force or let it fall.
- 9. Do not try to disassemble or modify this product.

INSTRUCTIONS

- Regarding the charging, please also refer to the Lithium-ion battery operation instructions from SR SUNTOUR.
- 2. Please connect the charger's DC connector to the battery socket.
- 3. Please plug the AC power cord to the AC wall socket.
- 4. The LED lights indicate the following status:

Red light: Charging

Green light: Charging complete or battery and battery charger are not connected

- When charging procession is completed, please un—plug the AC power cord from the AC wall socket.
- 6. Please un-plug the charger's DC connector from the battery socket
- 7. Please only charge between temperature 5°C~35°C.
- 8. When the LED light shows abnormal signals or cannot charge properly, please check the followings.
 - Red light or green light does not show: Make sure the AC power cord is connected to both the AC house wall socket and the charger properly.
 - Green light shows: Make sure the charger connector is properly connected to the battery.
 - Red light flashing: Please un-plug the AC power cord from the AC house wall socket, and then plug the AC cord back in the AC house wall socket.

If problem is not solved, please contact the stores or company. Do not disassemble or reconstruct the charger.

SR SUNTOUR EUROPE GMBH

Riedstrasse 31 83627 Warngau Germany

Phone: + 49 (0)8021 50 793-30 Email: service@srsuntour-cycling.com